
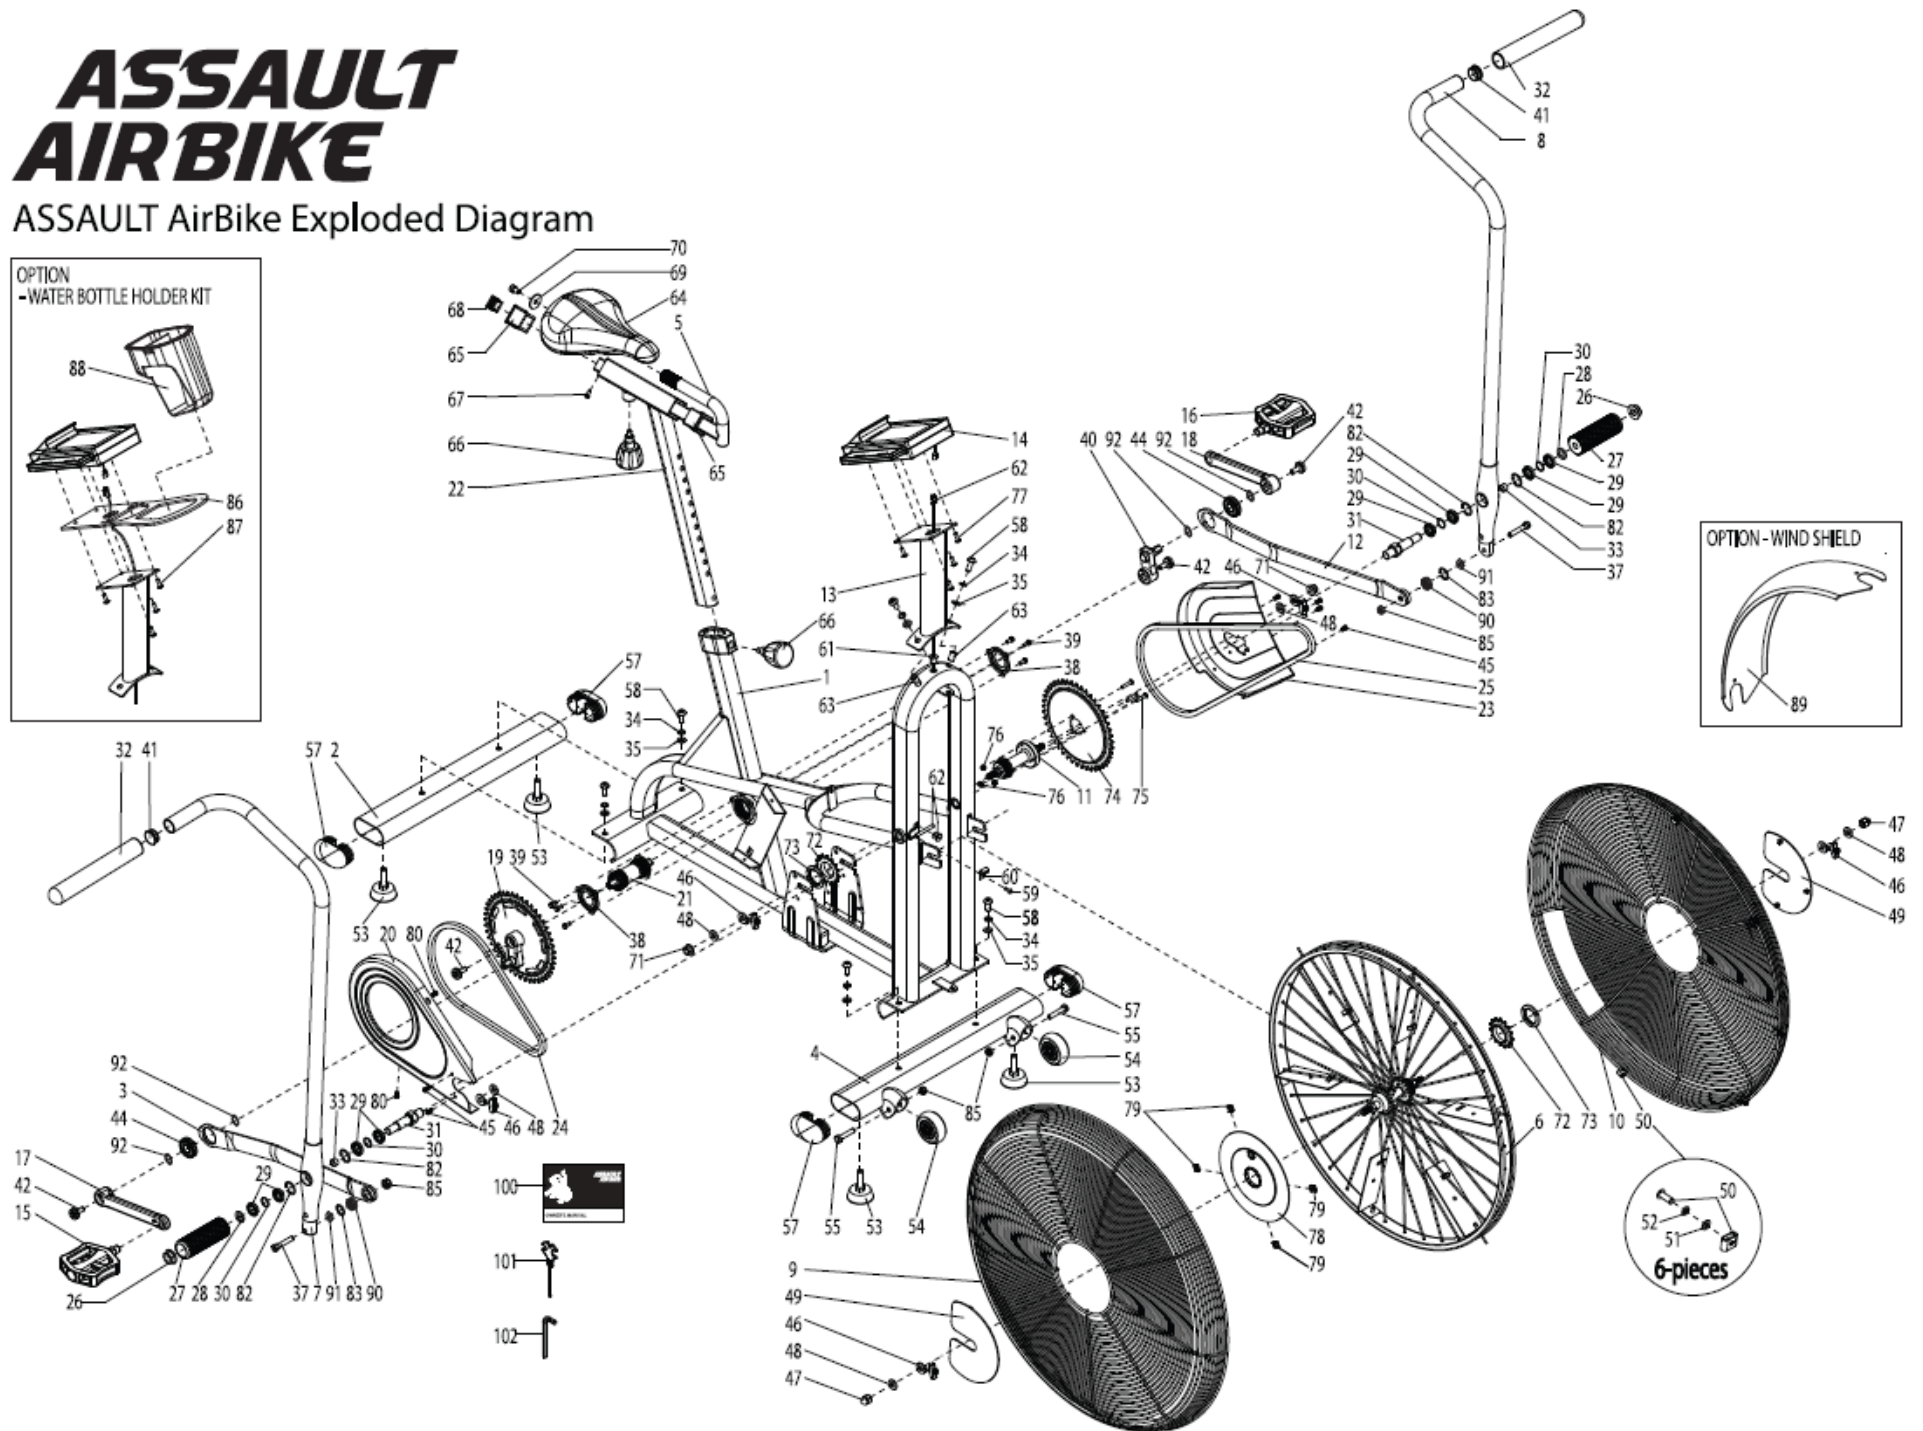


ASSAULT AIRBIKE

ASSAULT AirBike Exploded Diagram

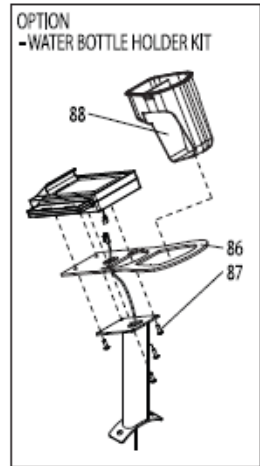

ASSAULT AIRBIKE

ASSAULT AirBike Parts List

No.	LifeCore #	Description	Qty
1	23-AS-001	Main Frame	1
2	23-AS-002	Rear Stabilizer	1
3	23-AS-003-A2	Linkage Arm Assembly - Right	1
4	23-AS-004	Front Stabilizer	1
5	23-AS-005	Seat Slide Rail	1
6	23-AS-006	Fan Wheel Assembly	1
7	23-AS-007	Handle Bar Assembly - Right	1
8	23-AS-008	Handle Bar Assembly - Left	1
9	23-AS-009	Fan Cage - Right	1
10	23-AS-010	Fan Cage - Left	1
11	23-AS-011	Hub - Rear Drive	1
12	23-AS-012-A2	Linkage Arm Assembly - Left	1
13	23-AS-013	Console Mast	1
14	23-AS-014	Computer/Console	1
15	23-AS-015	Pedal - Right	1
16	23-AS-016	Pedal - Left	1
17	23-AS-017-1	Crank Arm - Right	1
18	23-AS-018-1	Crank Arm - Left	1
19	23-AS-019-2	Bell Crank w/Chain Wheel - Right	1
20	23-AS-020	Chain Guard - Right	1
21	23-AS-021	Bottom Bracket Assembly	1
22	23-AS-022	Seat Post	1
23	23-AS-023	Chain Guard - Left	1
24	23-AS-024	Chain - Right Side 1/2x1/8" 64L	1
25	23-AS-025	Chain - Left Side 1/2x1/8" 98L	1
26	23-AS-026	M14 Flange Nut	2
27	23-AS-027	Foot Peg, Steel	2
28	23-AS-028	Plastic Washer $\Phi 14.5 \times \Phi 22 \times 1.0T$	2
29	23-AS-029	Ball-Bearing 6803ZZ	8
30	23-AS-030	Washer $\Phi 17.2 \times \Phi 19.5 \times 1.0T$	4
31	23-AS-031	Shaft 91.4mm	2
32	23-AS-032	Handle Bar Grip	2
33	23-AS-033	Spacer $\Phi 22.2 \times \Phi 11.8 \text{mm}$	2
34	23-AS-034	M8 Lock Washer	6
35	23-AS-035	Flat Washer $\Phi 8 \times \Phi 16 \times 1.5T$	6
37	23-AS-037-1	Lower Pivot Pin M8x43.0mm	2
38	23-AS-038	Bottom Bracket Locking Plate	2
39	23-AS-039	Hex Screw M5x12mm	6
40	23-AS-040-2	Bell Crank - Right	1
41	23-AS-041	Handle Bar End Cap	2
42	23-AS-042	Crank Fixing Bolt	2
44	23-AS-044	Ball-Bearing 99502ZZ w/Cir-Clip	2
45	23-AS-045	Self-Tapping Screw M5x8mm	6
46	23-AS-046	Chain Tensioner	4
47	23-AS-047	Acorn Nut 3/8"x26	2

No.	LifeCore #	Description	Qty
48	23-AS-048	Flat Washer $\Phi 10.0 \times \Phi 20.0 \times 3.0T$	4
49	23-AS-049	Fan Cage Cover - Black	2
50	23-AS-050	Fan Cage Clip & Nut	6
51	23-AS-051	Flat Washer $\Phi 5.0 \times \Phi 10.0 \times 1.0T$	6
52	23-AS-052	M5 Lock Washer	6
53	23-AS-053	Leveling Foot	4
54	23-AS-054	Transportation Wheel	2
55	23-AS-055	Hex Bolt M8x40.0x20.0mm	2
57	23-AS-057	Stabilizer End Cap 40x80mm	4
58	23-AS-058	Button Head Screw M8x20mm	6
59	23-AS-059	Self Tapping Screw M4x16mm	1
60	23-AS-060	Speed Sensor Bracket	1
61	23-AS-061	Cable Bushing	2
62	23-AS-062	Speed Sensor Cable w/Bushing	1
63	23-AS-063	Rivnut	2
64	23-AS-064	Saddle	1
65	23-AS-065	Seat Slide Bushing	2
66	23-AS-066	Pop Pin Knob	2
67	23-AS-067	Phillips Screw M5x10mm	1
68	23-AS-068	Seat Slide End Cap 25x25mm	1
69	23-AS-069	Flat Washer $\Phi 8.5 \times \Phi 30.0 \times 2.0T$	1
70	23-AS-070	Socket Head Screw M8x12mm	1
71	23-AS-071	Flange Nut 3/8"x26	2
72	23-AS-072	Drive Cog 14T	2
73	23-AS-073	Drive Cog Lockring	2
74	23-AS-074	Chain Wheel 46T	1
75	23-AS-075	Button Head Screw M5x25mm	3
76	23-AS-076	M5 Nylock Nut	3
77	23-AS-077	Phillips Screw M5x10mm	4
78	23-AS-078	Speed Sensor Magnet & Plate	1
79	23-AS-079	Speed Sensor Plate Clip	4
80	23-AS-080	Hex Screw M5x10mm	2
82	23-AS-082	Cir-Clip RTW-26	4
83	23-AS-083	Cir-Clip RTW-22	2
85	23-AS-085-1	Nylock Nut M8x9.5t	4
86	23-AS-086	Water Bottle Mounting Plate	1
87	23-AS-087	Phillips Screw M5x15mm	4
88	23-AS-088	Water Bottle Cage	1
89	23-AS-089	Wind Shield	1
90	23-AS-090	PB8 Spherical Bearing	2
91	23-AS-091	Flat Nut M8x1.25x4.0t	2
92	23-AS-092	Wave Washer $\Phi 21.6 \times \Phi 15.6 \times 0.3t$	4
100	23-AS-100	Owner's Manual	1
101	23-AS-101	13/15/22mm Phillips Driver	1
102	23-AS-102	M6 Hex Wrench	1